

CANON	
Digital Rebel	Cable-C2
EOS 1000D	Cable-C2
EOS 100D	Cable-C2
EOS 10D	Cable-C1
EOS 1100D	Cable-C2
EOS 1D	Cable-C1
EOS 1D C	Cable-C1
EOS 1D mk II	Cable-C1
EOS 1D mk II N	Cable-C1
EOS 1D mk III	Cable-C1
EOS 1D mk IV	Cable-C1
EOS 1D X	Cable-C1
EOS 1Ds	Cable-C1
EOS 1Ds mk II	Cable-C1
EOS 1Ds mk III	Cable-C1
EOS 20D	Cable-C1
EOS 20Da	Cable-C1
EOS 300D	Cable-C2
EOS 30D	Cable-C1
EOS 350D	Cable-C2
EOS 400D	Cable-C2
EOS 40D	Cable-C1
EOS 450D	Cable-C2
EOS 500D	Cable-C2
EOS 50D	Cable-C1
EOS 550D	Cable-C2
EOS 5D	Cable-C1
EOS 5D mk II	Cable-C1
EOS 5D mk III	Cable-C1
EOS 600D	Cable-C2
EOS 60D	Cable-C2
EOS 60Da	Cable-C2
EOS 650D	Cable-C2
EOS 6D	Cable-C1
EOS 700D	Cable-C2
EOS 70D	Cable-C2
EOS 7D	Cable-C1
EOS D30	Cable-C1
EOS D60	Cable-C1
EOS M	NOT SUPPORTED
Kiss Digital	Cable-C2
Kiss F Digital	Cable-C2
Kiss N	Cable-C2
Kiss X2	Cable-C2
Kiss X3	Cable-C2
Kiss X4	Cable-C2
Kiss X5	Cable-C2
Kiss X50	Cable-C2
Kiss X6	Cable-C2

NIKON	
1 AW1	NOT SUPPORTED
1 J1	NOT SUPPORTED
1 J2	NOT SUPPORTED
1 J3	NOT SUPPORTED
1 S1	NOT SUPPORTED
1 V1	NOT SUPPORTED
Coolpix P7800	Cable-N3
D1	Cable-N1
D1H	Cable-N1
D1X	Cable-N1
D100	NOT SUPPORTED
D100(with MB-D100)	Cable-N1
D2	Cable-N1
D200	Cable-N1
D2H	Cable-N1
D2HS	Cable-N1
D2X	Cable-N1
D2XS	Cable-N1
D3	Cable-N1
D3s	Cable-N1
D3X	Cable-N1
D300	Cable-N1
D3000	NOT SUPPORTED
D300S	Cable-N1
D3100	Cable-N3
D3200	Cable-N3
D3300	Cable-N3
D4	Cable-N1
D40	NOT SUPPORTED
D40X	NOT SUPPORTED
D50	NOT SUPPORTED
D5000	Cable-N3
D5100	Cable-N3
D5200	Cable-N3
D5300	Cable-N3
D60	NOT SUPPORTED
D600	Cable-N3
D610	Cable-N3
D70	NOT SUPPORTED
D700	Cable-N1
D7000	Cable-N3
D70S	Cable-N2
D7100	Cable-N3
D80	Cable-N2
D800	Cable-N1
D800 E	Cable-N1
D90	Cable-N3
Df	Cable-N3
P7700	Cable-N3

PowerShot G1 X	Cable-C2
PowerShot G10	Cable-C2
PowerShot G11	Cable-C2
PowerShot G12	Cable-C2
PowerShot G15	Cable-C2
PowerShot G16	Cable-C2
PowerShot G9	NOT SUPPORTED
Powershot N	NOT SUPPORTED
PowerShot S100	NOT SUPPORTED
PowerShot S110	NOT SUPPORTED
PowerShot S120	NOT SUPPORTED
PowerShot S90	NOT SUPPORTED
PowerShot S95	NOT SUPPORTED
PowerShot SX50 HS	Cable-C2
PowerShot SX510 HS	NOT SUPPORTED
Rebel SL1	Cable-C2
Rebel T1i	Cable-C2
Rebel T2i	Cable-C2
Rebel T3	Cable-C2
Rebel T3i	Cable-C2
Rebel T4i	Cable-C2
Rebel T5i	Cable-C2
Rebel XS	Cable-C2
Rebel XSi	Cable-C2
Rebel XT	Cable-C2
Rebel XTi	Cable-C2

OLYMPUS	
C2500L	Cable-O2
C5060	Cable-O2
C7070	Cable-O2
C8080	Cable-O2
E-1	Cable-O2
E-10	Cable-O2
E-100 RS	Cable-O2
E-20	Cable-O2
E-20N	Cable-O2
E-3	Cable-O2
E-30	Cable-O1
E-300	Cable-O2
E-330	NOT SUPPORTED
E-400	Cable-O1
E-410	Cable-O1
E-420	Cable-O1
E-450	Cable-O1
E-5	Cable-O2
E-500	NOT SUPPORTED
E-510	Cable-O1
E-520	Cable-O1
E-600	Cable-O1

P7800	Cable-N3
-------	----------

PANASONIC	
Ft 2	Cable-P1
FZ100	Cable-P1
FZ15	Cable-P1
FZ150	Cable-P1
FZ20	Cable-P1
FZ200	Cable-P1
FZ30	Cable-P1
FZ35	NOT SUPPORTED
FZ45	NOT SUPPORTED
FZ50	Cable-P1
G1	Cable-P1
G10	Cable-P1
G2	Cable-P1
G3	Cable-P1
G5	Cable-P1
GF1	Cable-P1
GF2	NOT SUPPORTED
GF3	NOT SUPPORTED
GF5	NOT SUPPORTED
GH1	Cable-P1
GH2	Cable-P1
GH3	Cable-P1
GM1	NOT SUPPORTED
GX1	Cable-P1
GX7	Cable-P1
L1	Cable-P1
L10	Cable-P1
LC1	Cable-P1
TCable-S2	Cable-P1
G6	Cable-P1

KONICA MINOLTA	
DiIMAGE 5	Cable-S1
DiIMAGE 7	Cable-S1
DiIMAGE 7Hi	Cable-S1
DiIMAGE 7i	Cable-S1
Dynax 3	Cable-S1
Dynax 4	Cable-S1
Dynax 5000	Cable-S1
Dynax 500si	Cable-S1
Dynax 505si	Cable-S1
Dynax 5D	Cable-S1
Dynax 600si	Cable-S1
Dynax 7	Cable-S1
Dynax 7000	Cable-S1
Dynax 700si	Cable-S1
Dynax 7D	Cable-S1

E-620	Cable-O1
Evolt E-330	NOT SUPPORTED
Evolt E-410	Cable-O1
Evolt E-500	NOT SUPPORTED
Evolt E-510	Cable-O1
OM-D E-M1	Cable-O1
OM-D E-M5	Cable-O1
OM-D E-M10	Cable-O1
PEN E-P1	Cable-O1
PEN E-P2	Cable-O1
PEN E-P3	Cable-O1
PEN E-P5	Cable-O1
PEN E-PL1	NOT SUPPORTED
PEN E-PL1s	NOT SUPPORTED
PEN E-PL2	Cable-O1
PEN E-PL3	Cable-O1
PEN E-PL5	Cable-O1
PEN E-PM1	Cable-O1
PEN E-PM2	Cable-O1
SP-510 UZ	Cable-O1
SP-550	Cable-O1
SP-550 UZ	Cable-O1
SP-560	Cable-O1
SP-560 UZ	Cable-O1
SP-565 UZ	Cable-O1
SP-570	Cable-O1
SP-570 UZ	Cable-O1
SP-590UZ	Cable-O1
XZ-1	Cable-O1
XZ-2	Cable-O1
XZ-2 iHS	Cable-O1
STYLUS 1	Cable-O1

HASSELBLAD	
H	Cable-C2
H3D	Cable-C2
H4D-200MS	Cable-C2
H4D-31	Cable-C2
H4D-40	Cable-C2
H4D-50	Cable-C2
H4D-50MS	Cable-C2
H4D-60	Cable-C2

Dynax 800si	Cable-S1
Dynax 807si	Cable-S1
Dynax 9	Cable-S1
Dynax 9000	Cable-S1
Dynax Sweet	Cable-S1
Dynax Sweets	Cable-S1
Maxxum Sweets	Cable-S1
Maxxum 3	Cable-S1
Maxxum 4	Cable-S1
Maxxum 5000	Cable-S1
Maxxum 500si	Cable-S1
Maxxum 505si	Cable-S1
Maxxum 5D	Cable-S1
Maxxum 600si	Cable-S1
Maxxum 7	Cable-S1
Maxxum 7000	Cable-S1
Maxxum 700si	Cable-S1
Maxxum 7D	Cable-S1
Maxxum 800si	Cable-S1
Maxxum 807si	Cable-S1
Maxxum 9	Cable-S1
Maxxum 9000	Cable-S1

FUJIFILM	
Finepix S1	Cable-F1
S3-Pro	Cable-N1
S5-Pro	Cable-N1
X-A1	Cable-F1
X-E1	Cable-C2
X-E2	Cable-C2
X-M1	Cable-F1
X-Q1	Cable-F1
X-T1	Cable-F1

SONY	
A100	Cable-S1
A200	Cable-S1
A230	NOT SUPPORTED
A290	NOT SUPPORTED
A300	Cable-S1
A3000	NOT SUPPORTED
A33	Cable-S1
A330	NOT SUPPORTED
A330TT	NOT SUPPORTED
A35	Cable-S1
A350	Cable-S1
A37	Cable-S1
A380	NOT SUPPORTED
A390	NOT SUPPORTED
A400	Cable-S1
A450	Cable-S1
A500	Cable-S1
A55	Cable-S1
A550	Cable-S1
A550V	Cable-S1
A560	Cable-S1
A57	Cable-S1
A58	NOT SUPPORTED
A580	Cable-S1
A65	Cable-S1
A65V	Cable-S1
A7	Cable-S2
A700	Cable-S1
A77	Cable-S1
A77II	Cable-S1
A77V	Cable-S1
A7R	Cable-S2
A850	Cable-S1
A900	Cable-S1
A99	Cable-S1
HX300	Cable-S2
HX50V	Cable-S2
NEX-3	NOT SUPPORTED
NEX-3C	NOT SUPPORTED
NEX 3N	Cable-S2
NEX-5	NOT SUPPORTED
NEX-5C	NOT SUPPORTED
NEX-5N	NOT SUPPORTED
NEX-5T	NOT SUPPORTED
NEX-6	NOT SUPPORTED
NEX-7	NOT SUPPORTED
NEX-C3	NOT SUPPORTED
NEX-F3	NOT SUPPORTED
QX-10	NOT SUPPORTED

QX-100	NOT SUPPORTED
RX1	NOT SUPPORTED
RX10	NOT SUPPORTED
RX100 II	Cable-S2

MINOLTA	
DiIMAGE 5	Cable-S1
DiIMAGE 7	Cable-S1
DiIMAGE 7Hi	Cable-S1
DiIMAGE 7i	Cable-S1
DiIMAGE A1	Cable-S1
DiIMAGE A2	Cable-S1
DiIMAGE A200	Cable-S1
Dynax 3	Cable-S1
Dynax 4	Cable-S1
Dynax 5000	Cable-S1
Dynax 500si	Cable-S1
Dynax 505si	Cable-S1
Dynax 5D	Cable-S1
Dynax 7	Cable-S1
Dynax 7000	Cable-S1
Dynax 7D	Cable-S1
Dynax 9	Cable-S1
Dynax 9000	Cable-S1
Dynax Sweets	Cable-S1
Maxxum 3	Cable-S1
Maxxum 4	Cable-S1
Maxxum 5000	Cable-S1
Maxxum 500si	Cable-S1
Maxxum 505si	Cable-S1
Maxxum 5D	Cable-S1
Maxxum 600si	Cable-S1
Maxxum 7	Cable-S1
Maxxum 7000	Cable-S1
Maxxum 700si	Cable-S1
Maxxum 7D	Cable-S1
Maxxum 807si	Cable-S1
Maxxum 9	Cable-S1
Maxxum 9000	Cable-S1

PENTAX	
645D	Cable-C2
ist D	Cable-C2
ist DL	Cable-C2
ist DL2	Cable-C2
ist DS	Cable-C2
ist DCable-S2	Cable-C2
K-01	NOT SUPPORTED
K-3	Cable-C2
K-30	Cable-C2

K-5	Cable-C2
K-5 II	Cable-C2
K-5 IIs	Cable-C2
K-50	Cable-C2
K-500	Cable-C2
K-7	Cable-C2
K-m	NOT SUPPORTED
K-r	NOT SUPPORTED
K-x	NOT SUPPORTED
K10 Grand Prix	Cable-C2
K100D	Cable-C2
K100D Super	Cable-C2
K10D	Cable-C2
K110D	Cable-C2
K200D	Cable-C2
K20D	Cable-C2
MX-1	NOT SUPPORTED
MZ-6	Cable-C2
MZ-L	Cable-C2
Q	NOT SUPPORTED
ZX-L	Cable-C2

SAMSUNG	
EX2F	Cable-SA1
GALAXY NX	Cable-SA1
NX MINI	Cable-SA1
NX1000	Cable-SA1
NX1100	Cable-SA1
NX2000	Cable-SA1
NX2000	Cable-SA1
NX210	Cable-SA1
NX30	Cable-SA1
NX300	Cable-SA1
GX-1L	Cable-C2
GX-1S	Cable-C2
NX-10	Cable-C2
NX-100	Cable-C2
NX-11	Cable-C2
GX-20	Cable-C2
NX-5	Cable-C2